

SINGLE SPRING SYSTEM

Installing the Single Spring System


These instructions are recommended for individuals who have had previous experience winding torsion springs. If you have not worked with a torsion spring system before, we would advise you to have your local garage door company install this system. This system uses the same type of springs as a garage door, but its function is totally different.

When mounting the welding angles in the trailer, be sure they are positioned so that when the cable spool, spacers and end bearing plate are slid together, the outside edge of the cable spool is in line with the edge of the doorframe. This is very important. If the cables are allowed to rub the doorframe they could fray and the system will fail.

Standing on the **inside of the trailer looking out**, be sure that the spring is mounted to your left. This is very important for proper operation. If the system is mounted **upside down**, the spring will grow in **diameter** when the system is wound. If the system is mounted properly, the spring should grow in **length**. You should be able to see the spring go down the tube it is mounted on as the spring is wound.

With the door in the down position, attach the cables to the anchor brackets mounted on the floor of the door by inserting the clevis pin through the anchor bracket and the round thimble of the cable and secure with the cotter pin. Insert the other end of the cable with the small round stop into the notch on the cable spool. Turn the cable spool to take up the excess cable and tighten the set screws in the spool. Attach a pair of vice grips to the tube touching the top of the doorframe to keep the tube from turning and install the other cable on the other cable spool.

You are now ready to wind the spring. Use two ½" diameter bars for this operation. A length of approximately 18" is recommended. Insert the first bar into the winding cone of the spring and pull **DOWN**. This system is designed for 10 full revolutions on the spring. It will be easier to balance the door if the spring is wound in quarter turns. After 38 quarter turns, tighten the set screws on the winding cone of the spring. After tightening both sets of screws on the spring, remove the vice grips and raise the door to see how it is balanced. Under ideal conditions, it should easily raise with one hand. Operate the door through one complete cycle. If adjustments are needed, adjust the spring by adding quarter turns or releasing quarter turns.

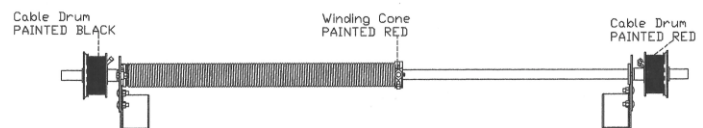

Standing on the INSIDE of the trailer looking OUT the Cable Drum that is PAINTED BLACK should be on the LEFT HAND side of the trailer.

Further technical assistance can be obtained toll free by calling (888) 611-1041 Monday-Friday from 8:00 AM to 5:00 PM EST.